630 Exterior Lighting

GENERAL 630-1

FRONT LIGHTING 630-1
Headlight bulb, replacing 630-1
Headlight assembly, removing and installing 630-2
Foglight assembly, removing and installing . . 630-3
Front turn signal assembly, removing and installing 630-4
Side Marker Lights 630-4

REAR LIGHTING 630-4
Taillight Bulbs 630-4
Taillight assembly, removing and installing . . . 630-5
Center Brake Light 630-5
Center brake light housing, replacing (4-door and coupe models) 630-5
License plate light, removing and installing . . 630-6

GENERAL

The headlight and foglight assemblies use halogen bulbs. To ensure the longevity of halogen bulbs, the bulb glass should not be handled. Dirt and skin oils may cause a bulb to fail prematurely. If necessary wipe bulb using a clean cloth dampened with rubbing alcohol.

NOTE —
Use only original equipment replacement bulbs. Non-original equipment bulbs may cause false failure readings on the check control display (where applicable).

WARNING —
When working on electrical systems, remove the fuse protecting the circuit under repair. See **610 Electrical Component Locations**.

FRONT LIGHTING

Headlight bulb, replacing

1. Open engine hood.
2. Working in back of headlight assembly, grasp rear of bulb socket (harness connector) and turn counterclockwise 90°. Pull bulb out of headlight assembly. See Fig. 1.
3. Disconnect harness connector from bulb.

CAUTION —
Do not touch halogen bulbs with your bare hands. If necessary wipe bulb using a clean cloth dampened with rubbing alcohol.

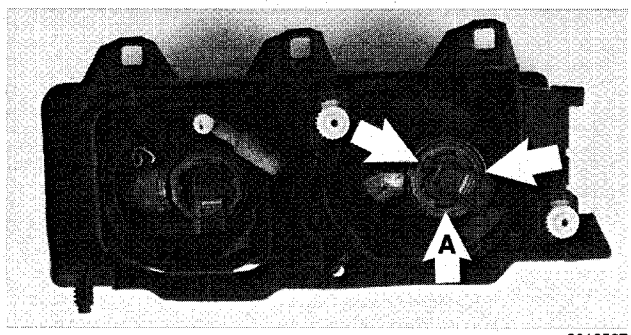

0012567

Fig. 1. To release bulb from headlight assembly, rotate socket counterclockwise to disengage retaining tabs (**arrows**). Right side bulb is shown in unlocked position. Note that bottom tab **A** is wider than other two.

4. Installation is reverse of removal. Align tabs on bulb base to cutouts on rear of lens assembly. Secure bulb by rotating clockwise 90°.

Bulb Applications
- Low beam headlight bulb H9006
- High beam headlight bulb H9005

630

Versión electrónica licenciada a Hernan Fulco / hfulco@iplan.com.ar / tel: 54(11)4855-3088
Buenos Aires // Argentina